

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (1)]							REFER TO PAGE		
			→	x 1,000 km	1	6	12	18	24		30	36
			MONTH	0.6	4	8	12	16	20		24	
EVERY	MONTH		6	12	18	24	30	36				
* FINAL DRIVE OIL	2 YEAR *R					R*			R*			
BRAKE SHOE/PAD WEAR				1	1	1	1	1	1	74		
BRAKE SYSTEM			1		1		1		1	68-74		
* BRAKE LIGHT SWITCH					1		1		1	—		
* STARTER LIMIT SWITCH				1	1	1	1	1	1	—		
* BRAKE LOCK LEVER				1	1	1	1	1	1	—		
* HEADLIGHT AIM					1		1		1	—		
** CLUTCH SHOE WEAR				1	1	1	1	1	1	—		
SIDE STAND					1		1		1	—		
* SUSPENSION					1		1		1	—		
* NUTS, BOLTS, FASTENERS			1		1		1		1	—		
** WHEELS/TIRES					1		1		1	—		
** STEERING HEAD BEARINGS			1		1		1		1	—		

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA SCOOTER DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

NOTES: (1) For higher odometer reading, repeat at the frequency interval established here.

(2) Service more frequently when riding in dusty areas.

(3) Service more frequently when riding in rain or at full throttle.

(4) Replace every 36,000 km (24,000 mile) or every 2 year whichever comes first.