

# Controls & Features

---

## Ignition Switch

The ignition switch is used for starting and stopping the engine (page 45 ), opening the seat (page 26 ), and locking the steering to prevent theft (page 61 ). Insert the key and turn it to the right for the SEAT or ON position. Push down on the key and turn it to the left to the LOCK (steering lock) position.

To unlock the steering lock, insert and push down on the key and turn it to the right to the OFF position.

Key Position	Function
ON	Electrical circuits on.
SEAT	No electrical circuits function. Seat can be opened.
OFF	No electrical circuits function.
LOCK (steering lock)	No electrical circuits function. Allows the steering head to be locked.