

# Maintenance Schedule

			FREQUENCY	ODOMETER READING (Note 1)					Refer to page
				NOTE	× 1,000 mi	0.6	2.5	5	
ITEM			× 1,000 km		1.0	4	8	12	
NON-EMISSION RELATED ITEMS		BRAKE SHOES WEAR							117
		BRAKE SYSTEM							114
	*	BRAKE LOCK OPERATION							24
	*	HEADLIGHT AIM							—
	**	CLUTCH SHOES WEAR							—
	*	SUSPENSION							—
	*	NUTS, BOLTS, FASTENERS							—
	**	WHEELS/TIRES							—
	**	STEERING HEAD BEARINGS							—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 186).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.