

9. Clutch—check operation, and adjust if necessary (pages 25 — 27 ).
10. Spark plug and high tension terminal — check for looseness.
11. Engine stop button—check for proper function (page 39 ).
12. Nuts, bolts, fasteners — check the front and rear wheels to see that the axle nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.