



Maintenance Schedule

Items	Frequency	Whichever Comes First ⇔	Initial Maint.	Regular Maint. Interval					Refer to page:	
				mi	100	600	1,200	1,800		2,400
				km	150	1,000	2,000	3,000		4,000
Note	Month	1	6	12	18	24				
Drive Chain		Note 1	I, L	I, L: every 300 mi (500 km) or 3 month					106	
Drive Chain Slider				I	I	I	I	107		
Brake Shoes Wear				I	I	I	I	94		
Brake System			I	I	I	I	I	90		
Clutch System			I	I	I	I	I	76		
Side Stand					I		I	105		
* Suspension					I		I	87		
* Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours					84	
* Nuts, Bolts, Fasteners			I		I		I	—		
** Wheels/Tires			I	I	I	I	I	96, 101		
** Steering Head Bearings			I		I		I	—		

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 160).

** In the interest of safety, we recommend these items be serviced only by your dealer.

50 Servicing Your Honda

