




## Right Fuel Tank Shroud Removal

Refer to *Safety Precautions* on page 45 .

RIGHT SIDE

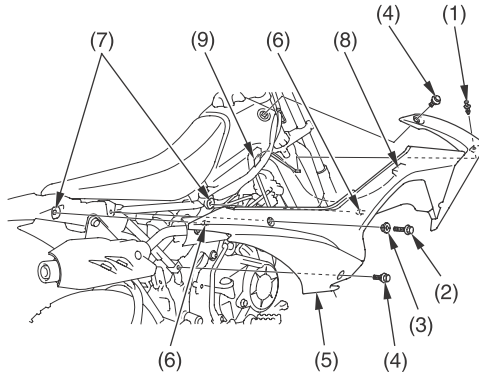

- |                            |              |
|----------------------------|--------------|
| (1) clip                   | (6) prongs   |
| (2) bolt A                 | (7) grommets |
| (3) collar                 | (8) slot     |
| (4) bolts B                | (9) tab      |
| (5) right fuel tank shroud |              |

### Removal

Remove the clip (1) (page 59).  
Remove the bolt A (2), collar (3) and bolts B (4) securing the right fuel tank shroud (5).  
Pull the right fuel tank shroud prongs (6) out of the rubber grommets (7).

### Installation

Install the right fuel tank shroud, aligning slot (8) with the tab (9) on the fuel tank and prongs with the rubber grommets.  
Press the right fuel tank shroud into position.  
Install the bolts and collar and tighten them.  
Install the clip (page 59).

