




## Clip Removal

### *Clip removal and installation:*

#### Removal

1. Pull up the center pin to release the lock.
2. Pull out the clip of the hole.

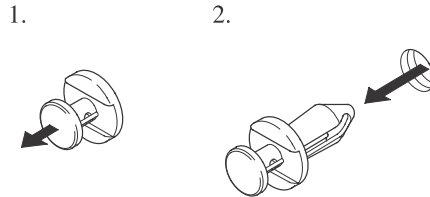

#### Installation

1. Insert the clip into the hole.
2. Press down the center pin securely to lock the clip.

