


Hot Start Lever

Refer to *Safety Precautions* on page 25.

Hot Start Lever Freeplay

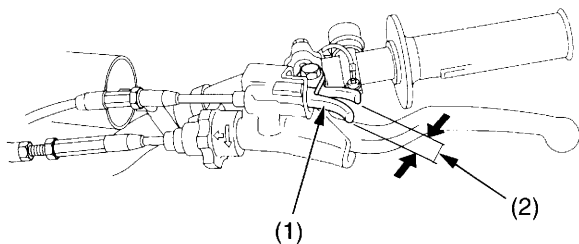

- (1) hot start lever
- (2) freeplay

Inspection

Check freeplay:


1/16 – 1/8 in (2 – 3 mm)

If necessary, adjust to the specified range.

Adjustment

Adjustments can be made with the cable end adjuster.

Loosen the lock nut (3) and turn the adjuster (4). Turning the adjuster in direction (+) will increase freeplay and turning it in direction (–) will decrease freeplay. After adjustment, tighten the lock nut.

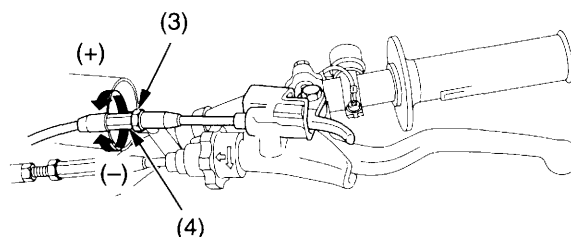

- (3) lock nut
- (4) adjuster

- (+) increase
- (–) decrease