


Exhaust Pipe/Muffler

Exhaust Pipe/Muffler Inspection

Check the flange bolts for tightness.
Check the exhaust pipe and muffler for cracks or deformation.
A damaged exhaust pipe and muffler may reduce engine performance.


Muffler Removal

1. Remove the seat mounting bolt (1), side cover bolt (2), collar (3) and right side cover (4).

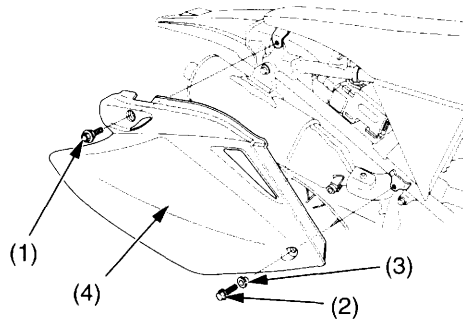

- | | |
|------------------------|----------------------|
| (1) seat mounting bolt | (3) collar |
| (2) side cover bolt | (4) right side cover |

2. Loosen the muffler clamp bolt (5).
3. Remove the muffler A bolt/washer (6), muffler B bolt (7) and muffler (8).

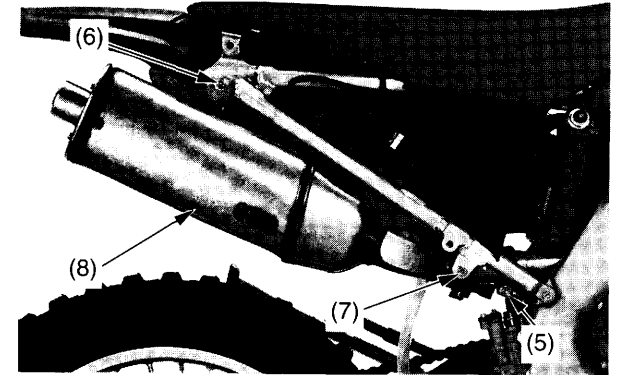

- | | |
|---------------------------|--------------------|
| (5) muffler clamp bolt | (7) muffler B bolt |
| (6) muffler A bolt/washer | (8) muffler |