


Exhaust Pipe/Muffler

Exhaust Pipe Removal


1. Remove the muffler (page 62).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and exhaust pipe gasket (3).

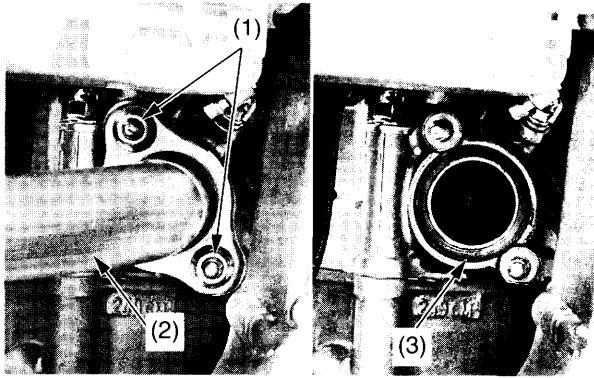

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) exhaust pipe gasket

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1), exhaust pipe (2) and exhaust pipe joint nuts (3) and tighten the nuts to the specified torque:
15 lbf-ft (21 N·m, 2.1 kgf·m)

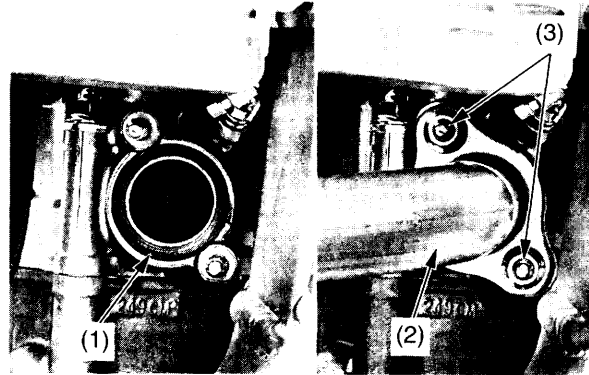

- (1) exhaust pipe gasket
(2) exhaust pipe
(3) exhaust pipe joint nuts

2. Install the muffler (page 63).