


# Hot Start Lever

Refer to *Safety Precautions* on page 25.

## Hot Start Lever Freeplay

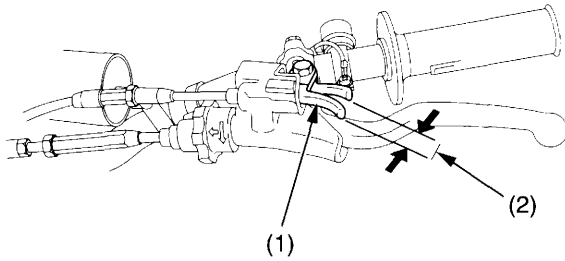

(1) hot start lever  
(2) freeplay

### Inspection

Check freeplay (2).


Freeplay: 1/16 – 1/8 in (2 – 3 mm)

If necessary, adjust to the specified range.

### Adjustment

Adjustments can be made with the cable end adjuster.

Loosen the lock nut (1) and turn the adjuster (2). Turning the adjuster clockwise (+) will increase freeplay and turning it counterclockwise (-) will decrease freeplay. After adjustment, tighten the lock nut.

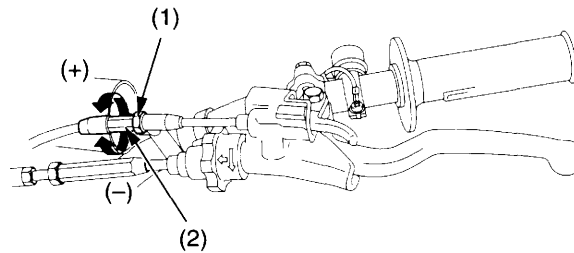

(1) lock nut  
(2) adjuster

(+) increase  
(-) decrease