

Maintenance Schedule

| Items | | Frequency | Whichever Comes First | | Initial Maint. | Regular Maint. Interval | | | | Refer to page: |
|----------------------------|----|------------------------|-----------------------|-------|----------------|---|-------|-------|-------|----------------|
| | | | ⇒ | mi | | 100 | 600 | 1,200 | 1,800 | |
| | | | | km | 150 | 1,000 | 2,000 | 3,000 | 4,000 | |
| | | | Note | Month | 1 | 6 | 12 | 18 | 24 | |
| NON-EMISSION RELATED ITEMS | | Drive Chain | Note 1 | | I, L | I, L: every 300 mi (500 km) or 3 month | | | | 100 |
| | | Drive Chain Slider | | | | I | I | I | I | 101 |
| | | Brake Shoe Wear | | | | I | I | I | I | 88 |
| | | Brake System | | | I | I | I | I | I | 85 |
| | | Clutch System | | | I | I | I | I | I | 72 |
| | | Side Stand | | | | | I | | I | 99 |
| | * | Suspension | | | | | I | | I | 82 |
| | * | Spark Arrester | | | | C: every 1,000 mi (1,600 km) or every 100 operating hours | | | | 80 |
| | * | Nuts, Bolts, Fasteners | | | I | | I | | I | — |
| | ** | Wheels/Tires | | | I | I | I | I | I | 90, 95 |
| | ** | Steering Head Bearings | | | I | | I | | I | — |

* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 146).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.