

Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Preparation


Before starting, insert the key and turn the ignition switch ON.
Make sure that the transmission is in neutral and the engine stop switch is at RUN (\odot).
Turn the fuel valve ON.

Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature

$10^{\circ} - 35^{\circ}\text{C}$ ($50^{\circ} - 95^{\circ}\text{F}$)

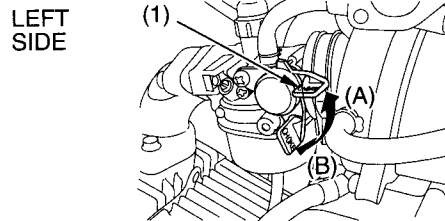

(1) choke lever

(A) fully ON
(B) fully OFF

1. Pull the choke lever (1) up all the way to fully ON (A).

(cont'd)