

## FEATURES (Not required for operation)


### SEAT

#### Removal:

1. Remove the bolts A (1) on each side of the rear fender.
2. Remove the bolts B (2) under the rear fender.
3. Pull both side cover prongs (3) out of the rubber grommets (4).
4. Slide the seat and rear fender back.

#### Installation:

1. Align the locating slot (5) under the front of the seat with the pin (6) on the rear of the fuel tank.
2. Align the locating prongs (7) on the bottom of the seat with the hooks (8) on the frame.
3. Slide the seat into position.
4. Align the side cover prongs with the rubber grommets. Press the side cover into position.
5. Install the bolts and tighten them.

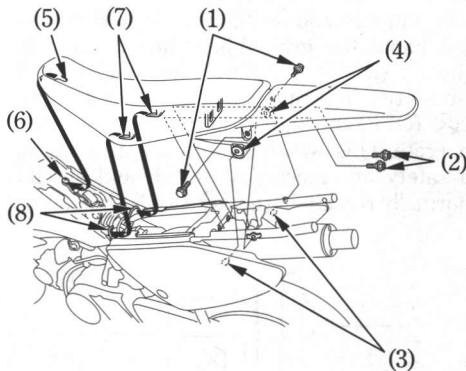

- |                       |                 |
|-----------------------|-----------------|
| (1) Bolts A           | (5) Slot        |
| (2) Bolts B           | (6) Pin         |
| (3) Side cover prongs | (7) Seat prongs |
| (4) Rubber grommets   | (8) Hooks       |