

Contents

MAINTENANCE SAFETY TIPS	37		
Maintenance	40	Fuses and relays.....	64
Daily inspection.....	40	Inspection / replacement.....	64
Regular service.....	45	Tyres	66
Maintenance Schedule	46	Pressure.....	66
Basic maintenance	49	Tread.....	66
Engine oil.....	50	Replacement tyres.....	67
Transmission oil.....	51	Air Filter	68
Adding Oil.....	51	Air filter element replacement.....	68
Coolant.....	54	<u>Cleaning</u>	69
Coolant level.....	54	<u>Damper Unit</u>	71
Adding coolant.....	55	<u>For our environment</u>	71
Drive Chain.....	56	<u>Colour labels</u>	72
Chain tension.....	56	<u>Genuine Honda mufflers</u>	73
Lubrication / Cleaning.....	57	<u>Vehicle Identification Number</u>	74
Brakes	58	<u>Overheat</u>	75
Front brake.....	58	<u>Engine does not start</u>	76
Brake fluid level.....	57	<u>Specifications</u>	77
Brake pads wear.....	60	<u>Service Data and Noise Warning</u>	80
Rear brake.....	59		
Brake fluid level.....	60		
Brake pads wear.....	62		
Clutch.....	61		
Clutch free play adjustment.....	63		