

Indicators / Warning Lamps

Indicators / Warning lamps

Speed warning lamp (optional)

Illuminates when the speedometer indicates approx 85km/h.

Oil pressure warning lamp

Lights when the oil pressure drops while the engine is running. Should the warning lamp light while the engine is running, stop immediately and check the oil level. If there is sufficient oil or if the lamp stays on after refilling the oil, contact an authorized Honda dealer as soon as possible.



Advice

Riding with the oil pressure warning lamp "ON" could result in damaging the engine. Such damage will not be covered by Warranty.



Tip

In normal operation, the oil pressure warning lamp turns on when the main switch is turned ON, and it turns OFF when the correct oil pressure is reached.

