

Maintenance Schedule

| ITEM | | FREQUENCY | ODOMETER READING [NOTE (1)] | | | | | | | | | *Refer to Service Manual |
|------|------------------------|-----------|-----------------------------|-------|---|----|----|----|----|----|----|--------------------------|
| | | | X 1,000km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | | |
| | | | X 1,000mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | |
| | | | NOTE | MONTH | | 6 | 12 | 18 | 24 | 30 | 36 | |
| | DRIVE CHAIN | | EVERY 1,000km (600mi) I, L | | | | | | | | | * |
| | DRIVE CHAIN SLIDER | | | | | | | | | | - | |
| | BRAKE FLUID | (NOTE 4) | | | | | R | | | R | - | |
| | BRAKE SHOE / PAD WEAR | | | | | | | | | | - | |
| | BRAKE SYSTEM | | | | | | | | | | - | |
| * | BRAKE LIGHT SWITCH | | | | | | | | | | - | |
| * | HEADLIGHT AIM | | | | | | | | | | - | |
| | CLUTCH SYSTEM | | | | | | | | | | - | |
| | SIDE STAND | | | | | | | | | | - | |
| * | SUSPENSION | | | | | | | | | | * | |
| * | NUTS, BOLTS, FASTENERS | | | | | | | | | | - | |
| ** | WHEELS / TYRES | | | | | | | | | | - | |
| ** | STEERING HEAD BEARINGS | | | | | | | | | | * | |