

# Clutch


## < Free play adjustment >

Adjust the free play with the adjusters on either the clutch lever and/or the clutch end of the clutch cable.

- Loosen the lock nut to use the adjuster.
- After adjusting, tighten the lock nut.
- Check the free play again.

Start the engine and try changing gears. If the changes are jerky or the engine stalls or starts to move, re-adjust the free play.

### COARSE ADJUSTMENT

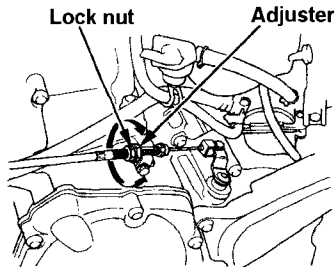

### FINE ADJUSTMENT

