

Fuel Tank

The fuel tank is located under the seat. To raise the seat, then remove the fuel fill cap (1) by turning it counterclockwise.

The fuel tank capacity including the reserve supply is:

4.8 ℓ (1.27 US gal, 1.06 Imp gal)

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise.

Make sure that the allow marks (2) on the fuel fill cap and fuel tank is aligned.


Use unleaded or low-lead petrol with a research octane number of 91 or higher. We recommend that you use unleaded petrol because it produces fewer engine and spark plug deposits and extends the life of exhaust system components.

FOR AUSTRALIA ONLY:

Use unleaded petrol with a research octane number of 91 or higher.

CAUTION:

* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.

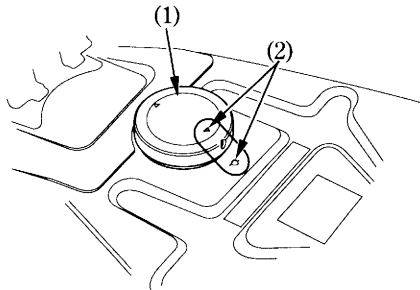

(1) Fuel fill cap

(2) Allow marks