

FEATURES

(Not required for operation)


STEERING LOCK (UY type)

The steering lock (1) is on the steering stem.

To Lock:

Turn the handlebar all the way to the left and insert the key into the lock, turn the key 180° clockwise and remove it.

To unlock the steering, perform the locking sequence in the reverse order.

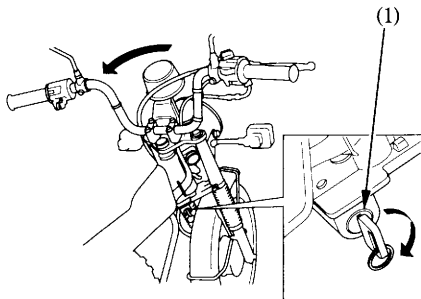

(1) Steering lock