

STARTING THE ENGINE

Always follow the proper starting procedure described below.

▲WARNING

- * Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.
- * Attempting to start the engine with the transmission in gear and the clutch engaged may result in injury or damage.

Preparation

Before starting, insert the key, turn the ignition switch • (ON) and confirm the following:

- Lock the parking brake. (UY type)
- The transmission is in NEUTRAL (neutral indicator light ON).
- The engine stop switch is at RUN.
- The fuel cock is ON.
- Retract the right side stand.


Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature.”

Normal Air Temperature

10° – 35° C (50° – 95° F)

1. Pull the choke lever (1) up all the way to Fully ON (A).

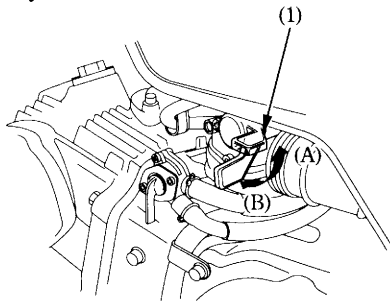

(1) Choke lever

(A) Fully ON

(B) Fully OFF