

Installation Notes:


- Reverse the removal procedure.
- Make sure that the tang (5) on the left fork leg is located in the brake panel.
- Tighten the axle nut to the specified torque.
- Axle nut torque:
(UB,NZ type)
52 N·m (5.3 kgf·m , 38 lbf·ft)
(UY type)
59 N·m (6.0 kgf·m , 43 lbf·ft)
- Adjust the brake (page 11 – 13).
- After installing the wheel , apply the brake several times and check for free wheel rotation when released.

▲WARNING

- * If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

CAUTION: (UB,NZ type)

- * Used cotter pins may not effectively secure fasteners. Always replace used cotter pins with new ones.

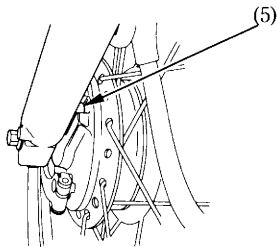

(5) Tang