

RIGHT SIDE COVER


The right side cover must be removed for battery and fuse maintenance.

Removal:

1. Remove the screw (1).
2. Open the side cover (2).
3. Release the tab (3) from the guide (4).

Installation:

- Installation can be done in the reverse order of removal.

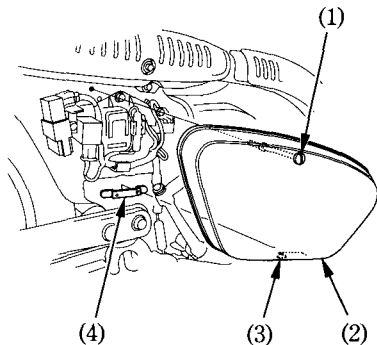

(1) Screw

(2) Side cover

(3) Tab

(4) Guide