

5. Tighten the rear axle nut to the specified torque:
88 N·m (9.0 kgf·m , 65 lbf·ft)

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.

6. Tighten the drive chain adjusting nuts.
7. Recheck drive chain slack.
8. Rear brake pedal freeplay is affected when repositioning the rear wheel to adjust drive chain slack. Check rear brake pedal freeplay and adjust as necessary (page 19).