



Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the rear brake adjusting nut (1).
Disconnect the brake rod (2) from the brake arm (3).
3. Disconnect the brake stopper arm (4) from the brake panel by removing the cotter pin, stopper arm nut, washer and rubber grommet.

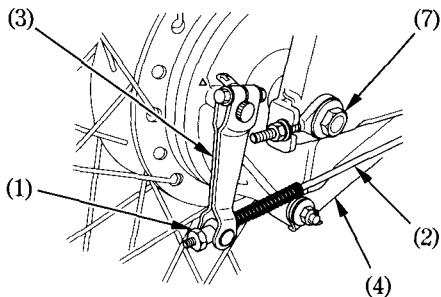

- | | |
|-------------------------|-----------------------|
| (1) Brake adjusting nut | (3) Brake arm |
| (2) Brake rod | (4) Brake stopper arm |
| | (7) Rear axle shaft |

3. Loosen the drive chain adjusting nuts (5).
4. Remove the rear axle nut (6) and pull out the rear axle shaft (7).
Push the wheel forward and remove the drive chain from the rear sprocket.
5. Pull out the wheel from the swingarm.

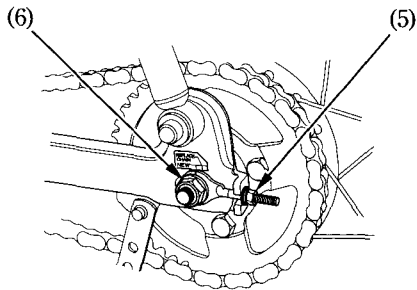

- | |
|--------------------------------|
| (5) Drive chain adjusting nuts |
| (6) Rear axle nut |