

### Fuse holder:

The fuse holder (1) is located on the battery case cover.


The specified fuse is:

**7A**

1. Remove the right side cover (page 37).
2. Open the fuse holder (1) and lift out the old fuse (3) with the clips (4).
3. Slide the old fuse out of the clips and discard it.
4. Slide the clips onto the ends of the spare fuse (2), push them back into the fuse holder, and close the fuse holder.

The spare fuse is located on the battery cover.

5. Install the right side cover.

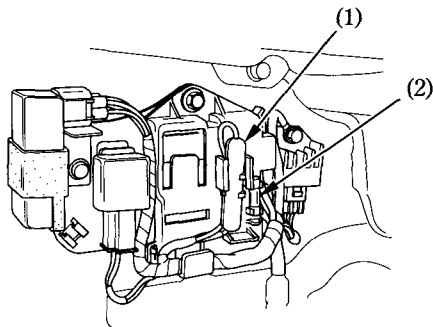

(1) Fuse holder

(2) Spare fuse