

ENGINE OIL

Engine Oil Level Check


Check the engine oil level each day before riding the motorcycle.

The level must be maintained between the upper (2) and lower (3) level marks on the dipstick (1).

1. Start the engine and let it idle for a few minutes.
2. Stop the engine and hold the motorcycle in an upright position on firm, level ground.
3. After a few minutes, remove the oil filler cap/dipstick, wipe it clean, and reinsert the dipstick without screwing it in. The oil level should be between the upper and lower marks on the dipstick.
4. If required, add the specified oil up to the upper level mark (See page 42). Do not overfill.
5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

CAUTION:

- * Running the engine with insufficient oil can cause serious engine damage.

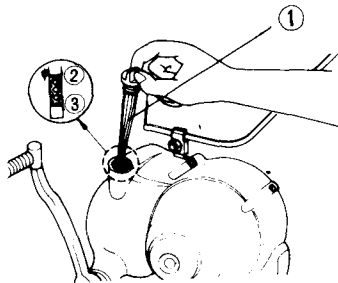

- (1) Oil filler cap/dipstick
- (2) Upper level mark
- (3) Lower level mark