

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (3)]				Refer to pages	
			x 1,000 km	1	4	8		12
			x 1,000 mi	0.6	2.5	5		7.5
			NOTE	MONTH	6	12		18
DRIVE CHAIN		NOTE 2	I, L EVERY 1000km (600mi)				56—60	
BATTERY				I	I	I	67—68	
BRAKE SHOE WEAR				I	I	I	66	
BRAKE SYSTEM			I	I	I	I	11—13	
* BRAKE LIGHT SWITCH				I	I	I	71	
* HEADLIGHT AIM				I	I	I	—	
CLUTCH SYSTEM			I	I	I	I	14	
SIDE STAND				I	I	I	62	
* SUSPENSION				I	I	I	61	
* NUT, BOLT, FASTENER		NOTE 2	I		I		—	
** WHEEL		NOTE 2	I	I	I	I	—	
** STEERING HEAD BEARING			I			I	—	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTE: 1. Service more frequently when riding in unusually wet or dusty areas.

2. Service more frequently when riding OFF-ROAD.

3. At higher odometer readings, repeat at the frequency interval established here.

4. SA, D type only

5. NZ, SA, D type only