


AIR CLEANER

(Refer to the maintenance precautions on page 46).

The air cleaner should be serviced at regular intervals (page 35). When riding in dusty areas, more frequent service may be necessary.


1. Remove the wing nut (1) and air cleaner tube clamp screw (2), then remove the air cleaner tube and cover.

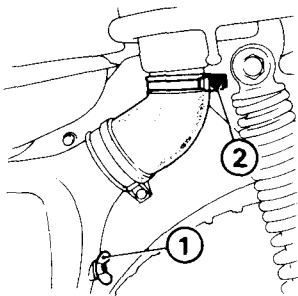

(1) Wing nut

(2) Screw

2. Unscrew the mounting plate bolt (3) and remove the mounting plate (4).
3. Pull out the air cleaner element (5).

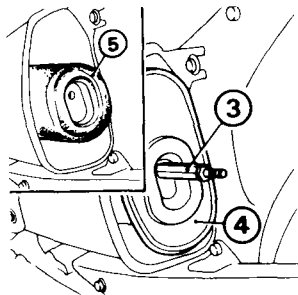

(3) Bolt

(4) Mounting plate