


● HORN BUTTON

This is a push button switch ① located on the right handle grip. When the horn button switch is depressed the horn will operate.

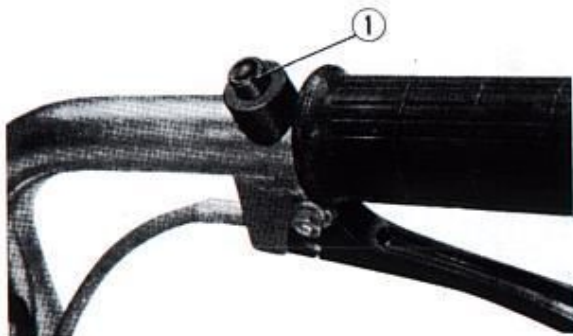

① Horn button