


● FUEL STRAINER SERVICE

The fuel strainer is incorporated in the right side of the carburetor. Accumulation of dirt in the strainer will restrict the flow of the fuel and cause the carburetor to malfunction, therefore, the fuel strainer should be serviced periodically.

1. Turn the fuel valve to "S" position (page 17).
2. Remove the fuel strainer cover and O ring seal 1.
3. The screen fuel strainer 2 can be removed from the carburetor. Wash in solvent or gasoline and reassemble.

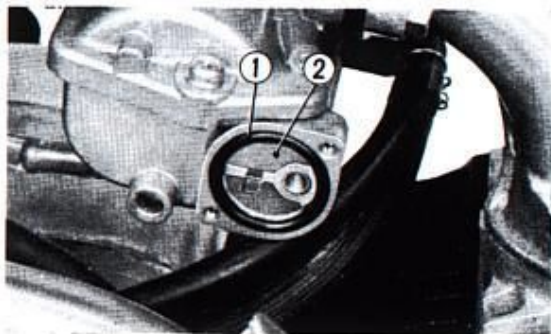

1 "O" ring seal
2 Fuel strainer