


● WHEEL REMOVAL

Removal of front and rear wheel is performed in the following manner.

1. Front wheel

- Place a suitable block under the engine to raise the front wheel off the ground.
- Remove the front brake adjusting nut ①.
- Remove the speedometer cable ④.
- Remove the front wheel axle nut ②, and pull out the front wheel axle ③.
- The front wheel can be removed from the frame.

Note: Standard tire air pressure is 17 P.S.I. (1.2 kg/cm²).

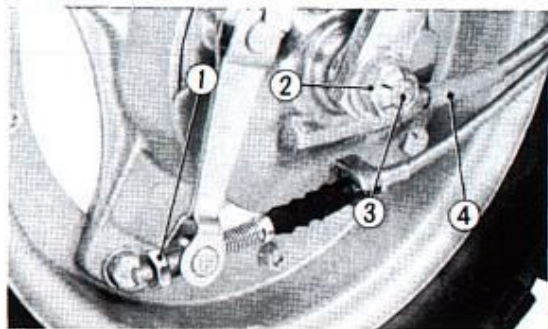

- ① Front brake adjusting nut
- ② Front wheel axle nut
- ③ Front wheel axle
- ④ Speedometer cable