


## i-Multi-Information Display

The i-multi-information display shows the odometer, trip meter, air temperature gauge, and other gauges.

It also displays important messages such as warnings and other helpful information.

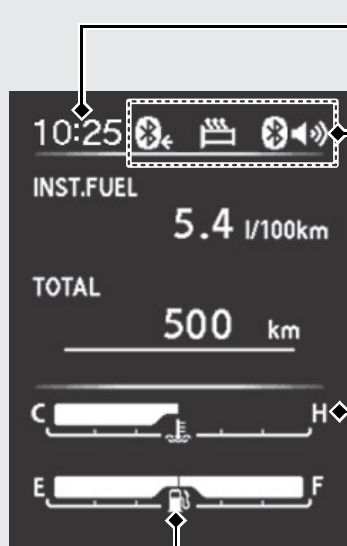

### Clock (12-hour display)

To set the clock: **➡P.28** **➡P.31**

Status icons **➡P.27**

### Coolant temperature gauge ( )



When the coolant is over specified temperature, the 6th (H) segment flashes and high coolant temperature indicator lights. **➡P.36**

**If the 6th (H) segment flashes while riding: ➡P.116**

**If the coolant temperature gauge flashes sequentially or turns off: ➡P.120**

### Fuel gauge



Remaining fuel when only 1st (E) segment starts flashing (reserve fuel mode): approximately 3.4 litres (0.9 US gal, 0.7 Imp gal)

At the same time, the low fuel indicator lights and the available driving distance display shows. **➡P.26** **➡P.37**

**If the fuel gauge flashes sequentially or turns off: ➡P.120**