



Instruments (Continued)

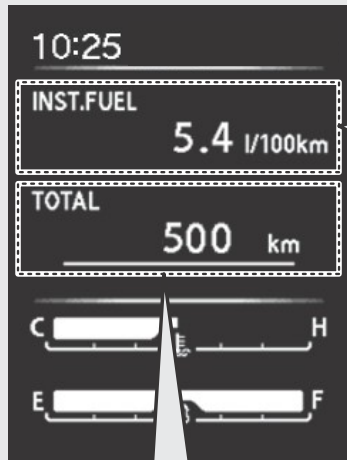

Current fuel mileage [INST.FUEL] & Average fuel mileage [AVG.FUEL] & Average speed [AVG.SPEED] & Trip time [TRIP TIME] & Audio information


▶ To reset the average fuel mileage: **➡ P. 27**

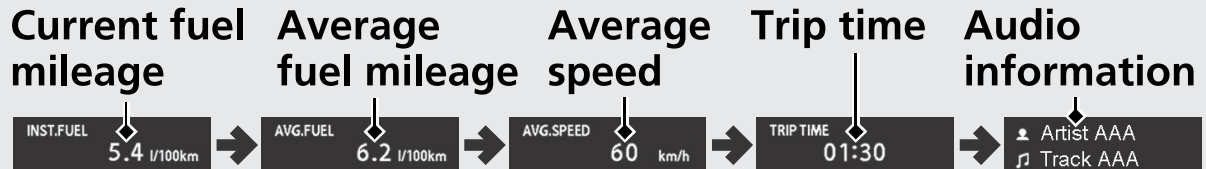

➡ Press the **SELECT** Δ (up) button

Odometer [TOTAL] & Tripmeter [TRIP A/B] & Air temperature gauge [AIR] & Available driving distance [RANGE] & Amount of remaining fuel [REMAINING FUEL]

▶ To reset the tripmeter: **➡ P. 27**

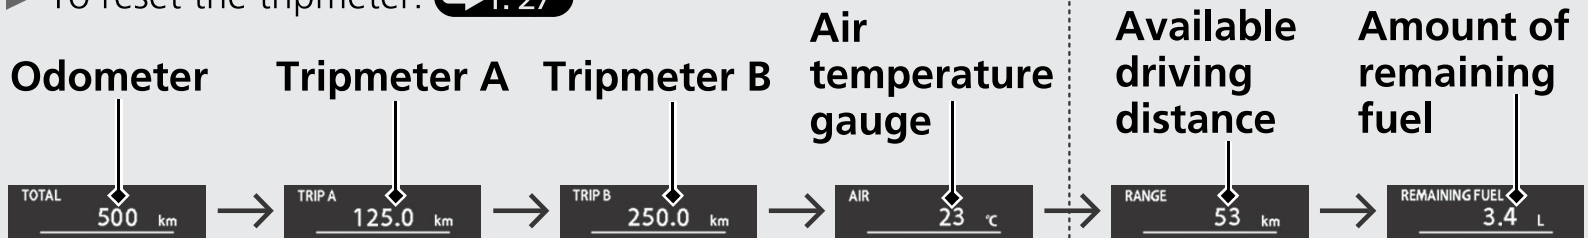

➡ Press the **SELECT** ∇ (down) button

Only when reserve fuel mode*

* Reserve fuel mode: When the 1st (E) segment of the fuel gauge flashes and the low fuel indicator lights, the available driving distance display and amount of remaining fuel display can be selected.