 


Muting

The audio system has two mute functions: the manual mute function and automatic mute function by vehicle speed.

To mute by manual operation

To mute the audio volume, press the **MUTE** button. The sound device status icon is changed.



Sound device status icon



Sound device status icon

To restore the original volume, press the **MUTE** button again. The sound device status icon is changed.

Also, restore the original volume using the **VOLUME** Δ (up), **TRACK** or **MODE** button.

To activate/deactivate of Automatic mute

When you slow down, audio volume decreases automatically, and when you accelerate, it returns to the original volume. When the volume level is 9 or less, audio volume does not decrease. Initial setting is deactivation.

- 1 To change the automatic mute mode, press and hold the **AUDIO** power button for 1 second.
- 2 Release the button. The display will show "AUTO MUTE ON" (activate) or "AUTO MUTE OFF" (deactivate).

**AUTO MUTE
ON**

**AUTO MUTE
OFF**