


Left Middle Cowl

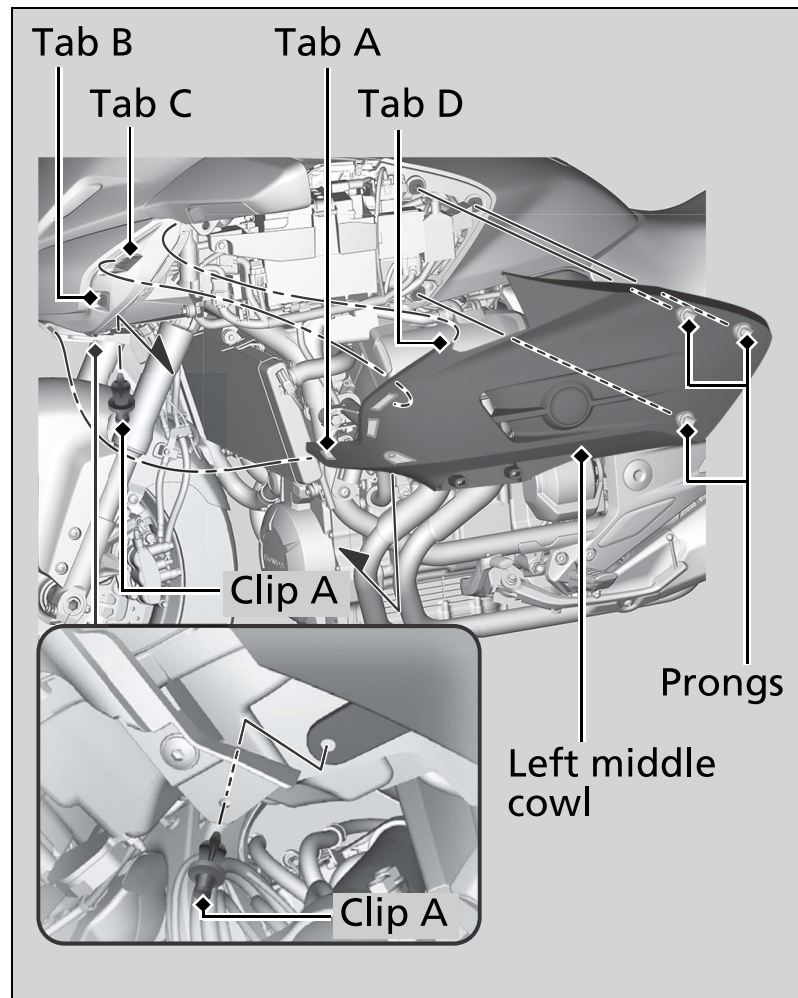

The left middle cowl must be removed to access the main fuses A.

Removal

1. Remove the left inner panel. ► P. 87
2. Remove the left shroud. ► P. 92
3. Remove the clip A. ► P. 94
4. Release the prongs from the grommets.
5. Release tab A from the slot.
6. Remove the left middle cowl by releasing tabs B and C from the guide, tab D from the rearview mirror.

Installation

Install the parts in the reverse order of removal.