


CLUTCH LOCK LEVER

This motorcycle is equipped with a clutch lock lever.

Do not use the clutch lock lever except for normal clutch lever free play.
The clutch adjustments are incorrectly, the clutch lever can not be locked, the clutch lever lock system will not function properly.

To lock the clutch lock lever:

1. Squeeze the clutch lever (1) completely.
2. Push the clutch lock lever (2) forward.
3. Lock the clutch lever by releasing the clutch lever while holding the clutch lock lever.

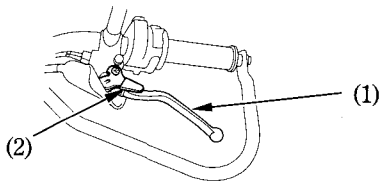

(1) Clutch lever (2) Clutch lock lever

