


## Spark Plugs

	NGK	ND
Standard	DR8ES-L	X24ESR-U
Option	DR8ES	X27ESR-U

1. Remove the spark plug lead and take out the plug with the special wrench provided in the tool kit.

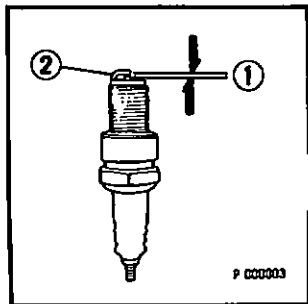

## Bujías

	NGK	ND
Standard	DR8ES-L	X24ESR-U
Opción	DR8ES	X27ESR-U

1. Quite el conductor de la bujía mediante la llave especial provista en la bolsa de herramientas.