


## STARTING THE ENGINE

Always follow the proper starting procedure described below.


This scooter is equipped with a side stand ignition cut-off system. The engine cannot be started if the side stand is down. A running engine will shut off if the side stand is lowered.

This scooter has an automatic fuel cock and starting enrichment thermal valve; there is no manual operation.

1. Place the scooter on its center stand.
2. Make sure that the engine stop switch is at  (RUN).
3. Turn the ignition switch (1) to ON.

### **▲WARNING**

**\* Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.**

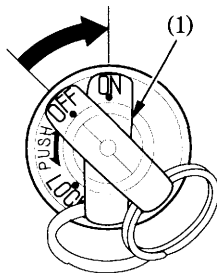

(1) Ignition switch