


3. Remove the belt case air cleaner assembly (4) by removing the bolts (5).
4. Remove the element cover (6) by releasing the tab (7).
5. Remove the element (8).
6. Wash the element in clean, nonflammable or high flash point solvent and let it dry thoroughly.

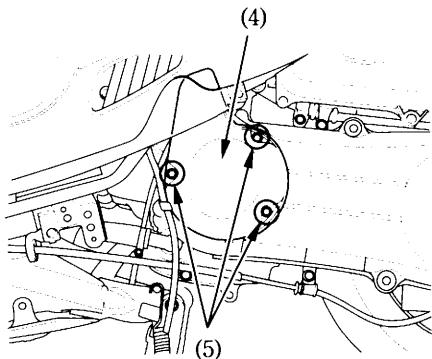

(4) Belt case air cleaner assembly  
(5) Bolts


### ▲WARNING

- \* Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

### CAUTION:

- \* Allow the element to dry thoroughly before installation.
- \* Do not apply oil to the element; damage to the drive belt will occur.

7. For installation, reverse the removal procedure.

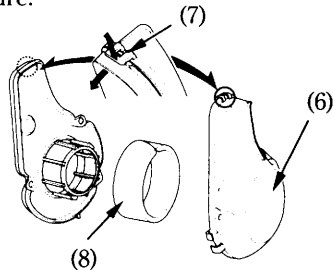

(6) Element cover      (8) Element  
(7) Tab