

# MAINTENANCE

page

## **84 MAINTENANCE**

- 84 THE IMPORTANCE OF MAINTENANCE
- 85 MAINTENANCE SAFETY
- 86 SAFETY PRECAUTIONS
- 87 MAINTENANCE SCHEDULE
- 90 TOOL KIT
- 91 SERIAL NUMBERS
- 92 COLOUR LABEL
- 93 AIR CLEANER
- 96 CRANKCASE BREATHER
- 97 ENGINE OIL
- 104 SPARK PLUGS
- 107 THROTTLE OPERATION
- 108 IDLE SPEED
- 109 COOLANT
- 110 FRONT AND REAR SUSPENSION INSPECTION
- 111 SIDE STAND
- 112 BRAKE PAD WEAR
- 114 BRAKE LOCK OPERATION
- 115 BATTERY
- 117 FUSE REPLACEMENT

page

- 121 BULB REPLACEMENT

## **128 CLEANING**

## **133 STORAGE GUIDE**

- 133 STORAGE
- 135 REMOVAL FROM STORAGE

## **136 SPECIFICATIONS**

## **140 CATALYTIC CONVERTER**