


1. Remove the oil filler cap/dipstick (1) from the right crankcase cover.

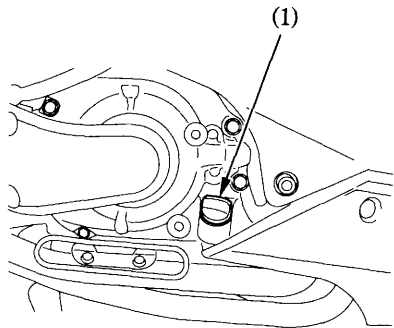


(1) Oil filler cap/dipstick

2. Place a drain pan under the crankcase and remove the oil drain plug (2).

The spring (3), oil strainer screen (4) and O-ring (5) will come out when the drain plug is removed.

3. Clean the oil strainer screen.
4. Check that the oil strainer screen, sealing rubber and drain plug O-ring are in good condition.

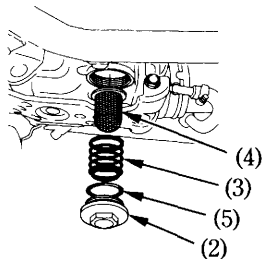

- (2) Oil drain plug
- (3) Spring
- (4) Oil strainer screen
- (5) O-ring