


Tail/Stoplight Bulb Replacement

1. Remove the two screws retaining the tail/stoplight lens.
2. Press the bulb ① inward (direction A) and twist to the left (direction B) and the bulb can be removed to C.
3. Replace with a good bulb.
4. When installing the taillight lens, do not overtighten the screws, as this may damage the lens.

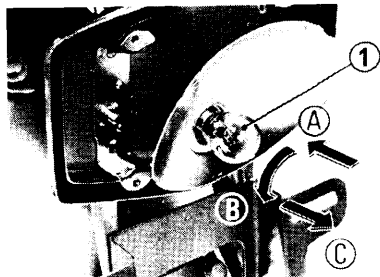

① Tail/stoplight bulb

