

## Spark Plugs

	NGK	ND
Standard	DPR8EA-9	X24EPR-U9
For cold climate (Below 5°C)	DPR7EA-9	X22EPR-U9
For extended high speed driving	DPR9EA-9	X27EPR-U9

1. Remove the spark plug lead and take out the plug with the special wrench provided in the tool kit.

---

## Bujías

	NGK	ND
Standard	DPR8EA-9	X24EPR-U9
Para el clima frío (inferiores a 5°C)	DPR7EA-9	X22EPR-U9
Para la conducción de gran velocidad extendida	DPR9EA-9	X27EPR-U9

1. Quite el conductor de la bujía y saque la bujía mediante la llave especial provista en la bolsa de herramientas.