

Motorcycle Cassette Deck

Loading

Open the tape cover (1) and slide the cassette into the deck through the front slot. Be sure to insert the cassette with the opening (where you can see the tape) on the right side.

Power Switch/Volume Control Switch (2) (PUSH RADIO/TAPE):

For cassette playback, press in the knob. The deck is in Tape if the display shows “▶” or “◀”.

Program Selector (3):

This switch can be used to change the tape direction of the tape.

