





## RIGHT HANDLEBAR CONTROLS

### Engine Stop Switch


The engine stop switch (1) is next to the throttle grip. When the switch is in the  (RUN) position, the engine will operate. When the switch is in the  (OFF) position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the  (RUN) position.

If your motorcycle is stopped with the ignition switch ON and the engine stop switch  (OFF), the headlight and taillight will still be on, resulting in battery discharge.


### Starter Button

The starter button (2) is below the engine stop switch (1).

When the starter button is pressed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

The starter motor will not operate when the starter button is pressed if the engine stop switch is in the  (OFF) position.

See pages 48 – 49 for “Starting Procedure.”

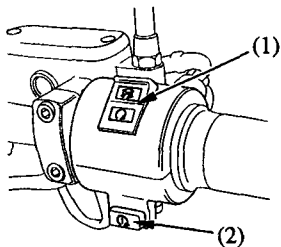

- (1) Engine stop switch
- (2) Starter button