

FINAL DRIVE OIL

Refer to the Safety Precautions on page 60.

Change the oil as specified in the maintenance schedule (page 64).

Change the oil with final drive at normal operating temperature and the motorcycle upright on level ground to assure complete and rapid draining.

1. To drain the oil, remove the oil filler cap (1) and drain plug (2).
2. After the oil has completely drained, check that the sealing washer (3) on the drain plug is in good condition and install the drain plug.


Drain Plug Torque:

20 N·m (2.0 kgf·m , 14 lbf·ft)

3. With the motorcycle upright on level ground, fill the final drive with the recommended oil; approximately:
170 cc (5.7 US oz , 6.0 Imp oz)

4. Make sure the final drive is filled up to the lower edge of the inspection hole (4) with the recommended oil.
Install the oil filler cap.

**Recommended Oil: HYPOID GEAR OIL
SAE 80**

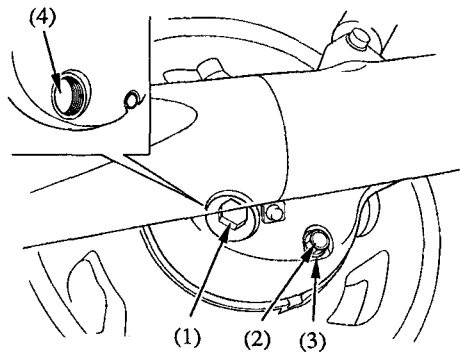

- | | |
|--------------------|---------------------|
| (1) Oil filler cap | (3) Sealing washer |
| (2) Oil drain plug | (4) Inspection hole |