

---

**Speedometer:** shows riding speed.

**Digital Clock, Air Pressure And**

**Audio System Display:** Shows time, air pressure and radio/cassette deck functions (page 17, 19, 51, 54)

**Tachometer:** shows engine rpm.

Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.

**CAUTION:**

- *The red zone indicates the maximum limits of engine speed and running the engine in the red zone may adversely affect its service life.*



**Turn Signal Indicators**

Flashes when the turn signal operates.



**Odometer**

Shows accumulated mileage.



**Tripmeter**

Shows mileage per trip.



**Tripmeter Reset Button**

Pushing the button resets the tripmeter to zero (0)



**High Beam Indicator (blue)**

Lights when the headlight is on high beam.



**Over Drive Indicator**

Lights when the transmission is in overdrive.