

# ESSENTIAL INDIVIDUAL COMPONENTS

---

## Cruise Control Switch

**⚠ WARNING**

- *The Cruise Control automates the function of the throttle to maintain your motorcycle at a constant speed. This can be a convenience on long trips, but it can also be a danger if there are any other vehicles on the road or if the road is unfamiliar. Pay strict attention to the responsibility of riding whenever using the Cruise Control.*

The Cruise Control system allows you to set and automatically maintain any speed between 48 and 130 km/h (30 and 80 mph) in 4th and OD. As its name implies, it is meant for cruising on straight, uncongested highways or freeways. It is not recommended to be used in traffic, on winding roads or in bad weather conditions where the rider should have total control of the throttle.

### To Set the Cruise Control:

Push the CRUISE CONTROL master switch: the indicator light will come on. Accelerate to the desired speed, then push the SET switch. The Cruise Control set light on the instrument panel will come on. The speed you were going when you released the SET switch is the speed the Cruise Control will hold. You can then "fine tune" the set speed by briefly pushing and releasing the SET/DECEL switch to decrease it or pushing and releasing the RESUME/ACCEL switch to slightly increase it.

### NOTE:

- A quick "tap" on either the SET/DECEL or RESUME/ACCEL SWITCH may change your speed by only approximately 1.6 km/h. (1 mph).

