

# MAINTENANCE

## REAR WHEEL REMOVAL

(Refer to the maintenance precautions on page 61.)

For related torque specifications, see page 94. The numbers are shown in sequence of disassembly.

